

Basic Overview and Use



- 1 Handset with Voice Mail indicator light.
- 2 Large LCD Display
- 3 Cisco Series Number (7940/7941/7960/7961)
- 4 Programmable line appearances, features and speed dials.
- 5 Foot stand button
- 6 Directory Button (Missed Calls, Received Calls, Placed Calls)
- 7 Info/Help button
- 8 Settings button
- 9 Speaker Phone button
- 10 Mute button
- 11 Headset button
- 12 Volume buttons
- 13 Services button (Personal and Corporate Directory)
- 14 Voice Mail button
- 15 Scroll Key
- 16 Dial Pad
- 17 Soft Keys (features and functions)